





## Pad coffee-maker

### Dear Customer,

Before using the appliance, the user should read the following instructions carefully.

### Connection to the mains supply

The appliance should only be connected to an earthed socket installed in accordance with the regulations.

Make sure that the supply voltage corresponds with the voltage marked on the rating label of the appliance. This product complies with all binding CE labelling directives.

### Familiarisation

1. Locking ring
2. removable coffee outlet
3. Housing
4. Drainer
5. Drip tray
6. Pad holder
7. Power cord with plug
8. Start button with indicator light
9. Water container
10. Water container lid

### Important safety instructions

- Before the appliance is used, the main body as well as any fitted attachments should be checked thoroughly for any defects. If the appliance, for instance, has been dropped onto a hard surface, it must no longer be used: even invisible damage may have adverse effects on its operational safety.
- The power cord should be regularly examined for any signs of damage. In the event of such damage being found, the appliance must no longer be used.
- Fill the container with fresh, clean water only. Do not, under any circumstances, fill the container with milk, coffee or hot water.
- As the appliance is pressurised, do not

attempt to open the locking ring while the pump is still running, or while coffee is still coming out. Once the brewing cycle has finished, wait until the indicator light stops flashing.

- **Caution:** do not touch any hot parts of the appliance after brewing. The coffee outlet and the inserts, as well as the coffee pad itself, are very hot. **There is therefore a danger of scalding.**
- To prevent damage to the heating element, do not remove the water container while brewing is in progress.
- During operation, the coffee maker should be placed on a level, non-slip surface, impervious to splashes and stains.
- **Always remove the plug from the wall socket**
  - during periods of non-use,
  - in case of any malfunction, and
  - before cleaning.
- When removing the plug from the wall socket, never pull on the power cord; always grip the plug itself.
- For reasons of hygiene, coffee pads should be removed immediately after brewing; leave the locking ring in its open position.
- This appliance is not intended for use by any person (including children) with reduced physical, sensory or mental capabilities, or lacking experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- No responsibility will be accepted if damage results from improper use, or if these instructions are not complied with.
- This appliance is intended for domestic use only and not for commercial applications.
- In order to comply with safety regulations and to avoid hazards, repairs of electrical appliances must be carried out by qualified personnel, including the

replacement of the power cord. If repairs are needed, please send the appliance to one of our customer service departments. The address can be found in the appendix to this manual.

#### **Before using the appliance for the first time**

Before initial use, the appliance should be thoroughly cleaned as described in the section ***General care and cleaning***. In addition, let the appliance run through two brewing cycles without a pad inserted.

#### **Water container**

Fill the water container as follows:

- Grip the recess on the water container with your thumb on the container lid, and lift the container out of the appliance.

- Remove the lid.
- Fill to the maximum-level mark (approx. 750ml) with clean, cold water (use fresh water each day).
- Replace the lid.
- Replace the container in the appliance and push it down to open the valve in the bottom of the container.

Deposits of dirt and lime may cause the seals in the outlet at the bottom of the water container and the seals around the valves to leak. Check the seals carefully each time the water container is inserted and, if necessary, carefully remove any deposits.

After extended periods of non-use, we recommend that you let the appliance run through at least two brewing cycles without a coffee pad inserted; this will help to flush and clean out the system.

## Indicator light

Flash sequence	Significance	Remedy
<i>light permanently on (=operation)</i>	The appliance pre-heats and the pump is active.	-
<i>rapid flashing (=error)</i>	The coffee outlet has not been fitted.	Fit the coffee outlet.
	The locking ring is not closed properly.	Push the ring down to ensure the unit is properly closed.
	The water level is below the minimum-level mark.	Replenish.
	The magnet in the water container has become stuck.	Try to free the magnet by gently shaking the container.
	The water container has not been inserted correctly.	Remove and replace correctly.
<i>slow flashing</i>	The system pre-heats before the actual brewing cycle.	-
	The brewing cycle is coming to an end, and the system indicates a necessary waiting period during which the pressure is reduced. <b>Warning: wait for the flashing to stop before pushing the ring up.</b>	
<i>double flashing</i>	If the appliance is not used for a period of around 5 minutes with the locking ring in its down position, the indicator light starts flashing.	Push the ring up and remove the pad. For reasons of hygiene, leave the ring in its open position.

### Pad holder

To prepare coffee, a pad must be placed inside the pad holder. When positioning the pad, take care to place it right in the centre of the holder. This ensures that the pad's paper rim is not caught underneath the seal when the lid is closed. **If a pad is not equally thick on all sides, the pad should be inserted with the thicker part facing down. Do not use any pads other than the round soft coffee-pads commercially available.**

**Do not fill the pad holder with ground coffee.**

Fit the pad holder in the coffee outlet and lock it by turning clockwise. To remove the pad holder again, turn anti-clockwise.

Possible discolouring of the pad holder is production-related, and is not in any way detrimental to its quality or function.

### Drip tray and drainer

Ensure that the drip tray and drainer are correctly fitted before each use.

#### *Drip tray*

The drip tray can be removed by pulling it out from the front. To replace the tray, simply slide it back into place.

#### *Drainer:*

When inserting the drainer, ensure that both the arresting hooks on the housing properly engage in the two corresponding openings on the rear part of the drainer. Then push the drainer down so that the two locating pins on the underside of the drainer slide home into the corresponding openings in the housing. When removing the drainer, slightly lift up the front part and pull it out from the appliance.

### Coffee preparation

- Fill the water container up to its maximum-level mark with fresh, clean water.
- Insert the plug into a suitable wall outlet.

- Fit the pad holder into the coffee outlet and lock it by turning clockwise.
- Place the pad right in the centre of the pad holder.
- Push the locking ring up.
- Slide the coffee outlet with the loaded pad holder all the way into the corresponding guide track on the appliance.
- Push the locking ring down to close the appliance properly.
- Place a cup of around 140 ml capacity below the coffee outlet.
- Press the start button. The brewing cycle starts and is indicated by the slow-flashing light.
- Once pre-heating is complete, the coffee is released straight into the cup. **After brewing, always wait until the subsequent pressure-release phase (indicated by the slow-flashing light) has completely finished.**
- Remove the cup from below the coffee outlet.
- Push the locking ring up.
- **Caution:** the coffee outlet and the inserts as well as the coffee pad are very hot after brewing; to prevent burns, only the handle of the coffee outlet must be used when it is removed from the appliance. Remove and dispose of the used pad.
- For reasons of hygiene, coffee pads should be removed immediately after each brewing cycle.
- The brewing cycle can be interrupted at any time by pressing the start button again.

### General care and cleaning

- Before cleaning the appliance, ensure it is disconnected from the power supply and has cooled down completely.
- To avoid the risk of electric shock, do not clean the appliance with water and do not immerse it in water.
- Do not use abrasives or harsh cleaning

solutions.

- The exterior housing may be wiped clean with a damp cloth and a mild detergent.
- Unlock the pad holder from the coffee outlet by turning the pad holder anti-clockwise, and take out the pad. The coffee outlet and the water container may be cleaned with hot soapy water. Ensure that all parts are thoroughly rinsed and dried afterwards.
- During use, ensure that the drip tray is emptied in good time. The drip tray, drainer and pad holder may be cleaned with hot soapy water or in a dishwasher.

### Descaling

Depending on the water quality (the lime content) in your area as well as frequency of use, all household appliances using hot water need descaling (i.e. the removal of lime deposits) on a regular basis to ensure proper functioning.

Any commercially available descaling agent suitable for coffee makers may be used for this purpose. Prepare around 750 ml of descaling solution in accordance with the manufacturer's instructions. Do **not** use vinegar.

- Fill the water container up to its maximum-level mark with the descaling solution.
- Place a suitable container, with a minimum capacity of 750ml, below the coffee outlet.
- As described in the section *Coffee preparation*, but without the pad holder and pad inserted, switch the appliance on and let the descaling agent pass through the system in successive cycles. Allow 5 minutes between cycles for the descaling agent to take effect.
- To flush out any residues of the agent after descaling, let the appliance run through at least one additional cycle with fresh water as described in the section *Coffee preparation* (but without the pad holder or pad inserted).

- **Do not pour descalers down enamelled sinks.**

### Disposal



Do not dispose of old or defective appliances in domestic garbage; this should only be done through public collection points.

### Guarantee

This product is guaranteed against defects in materials and workmanship for a period of two years from the date of purchase. Under this guarantee the manufacturer undertakes to repair or replace any parts found to be defective, providing the product is returned to one of our authorised service centres. This guarantee is only valid if the appliance has been used in accordance with the instructions, and provided that it has not been modified, repaired or interfered with by any unauthorised person, or damaged through misuse.

This guarantee naturally does not cover wear and tear, nor breakables such as glass and ceramic items, bulbs etc. If the product fails to operate and needs to be returned, pack it carefully, enclosing your name and address and the reason for return. If within the guarantee period, please also provide the guarantee card and proof of purchase.